

OWNER'S MANUAL

2 CHANNEL KEYLESS ENTRY

RS-645

QUICK REFERENCE

BUTTON #1
LOCK
UNLOCK
PANIC



BUTTON #2
TRUNK
RELEASE

ACTIVE ARMING MODE:

Arm the keyless system by pressing the transmitter's #1 button once momentarily. Door will lock and will confirm with 1 parking light flash. Optional LED will be solid and start to flash slow after 10 seconds, starter disable feature will be activated.

PASSIVE ARMING MODE:

In passive locking mode, the keyless entry will lock by itself after 30 seconds of the ignition turn off. Harness does not have a door trigger wire. In passive locking mode, the keyless entry will lock the doors by itself after 30 seconds of the ignition turn off.

DISARMING THE SYSTEM:

To disarm the keyless system, press button #1. The keyless entry will confirm, lights will flash twice. Optional LED will turn off. Optional starter disable feature will be deactivated. Door locks will unlock.

PANIC MODE:

For emergency situations, press and hold button #1 of the transmitter for 3 seconds. This will activate the panic mode. The optional horn siren will sound and the parking lights will flash for 60 seconds (or until the transmitter button #1 is pressed again for 1 second).

VALET MODE:

If you are going to have your vehicle serviced, or parked by a valet, you will want to put your keyless entry system into valet mode. When the system is in the valet mode, it cannot be armed. The door lock and unlock features (if so equipped) will still function.

To Enter Valet Mode:

1. Disarm the system if it is armed.
2. Turn ignition to "ON" (run) position.
3. Within 10 seconds push & hold valet switch for 5 seconds until the LED goes on solid.

To Exit Valet Mode:

1. Turn ignition key to "ON" (run) position.
2. Push valet button for approximately 5 seconds until the LED goes out and the siren chirps twice.

ONE TIME DEFEAT OF PASSIVE ARMING MODE

To activate:

1. Disarm the system.
2. Momentarily press button #2 on your remote and then press and hold button #1 for 3 seconds
3. The siren will chirp 6 times and the LED will come on solid.
4. The system will remain in defeat mode. The keyless entry will still operate normally.

To de-activate:

1. Momentarily press button #2 on your remote and then press and hold button #1 for 3 seconds.
2. The siren will chirp twice and the LED will turn off.
3. The system will resume back to normal operation.

THE SYSTEM WILL REMAIN IN DEFEAT MODE UNTIL YOU ARM OR DISARM SYSTEM FROM REMOTE!!

LOST OR NON-WORKING REMOTES EMERGENCY OVERRIDE SWITCH

If your remote transmitters are lost or not working, you can manually disarm your system as follows:

1. Open the door closest to the valet button.
2. Insert the ignition key and turn to "ON" position.
3. Press and hold the valet switch for approximately 3-5 seconds. This will disarm the system, unlock and disable ignition kill and automatically put it in the valet mode.

IMPORTANT: YOU MUST EXIT THE VALET MODE ONCE YOU HAVE FOUND OR REPAIRED YOUR REMOTES.

NOTE: Your remote transmitters each contain a special battery. If you notice a decrease in the operating range of your transmitters, this may indicate that your battery is becoming weak (even if the red LED on the transmitter is still illuminating) and may require replacement. We recommend that you consult your dealer for battery replacement because improper installation may damage your remote transmitter and void the warranty.

PARKING LIGHT CONVENIENCE FEATURE:

Parking lights will stay on for 30 seconds after alarm disarms. Parking lights will shut off as soon as ignition key is turned on.

2ND CHANNEL OUTPUT:

Press transmitter button #2 for 3 seconds. This will give a continuous, 250mA ground output as long as the button is pressed down for optional trunk release or optional remote car starter.

////ACCELELECTRONICS INC.