 


7 INCH TFT LCD MONITOR USB/SD/IR

Instructions Manual

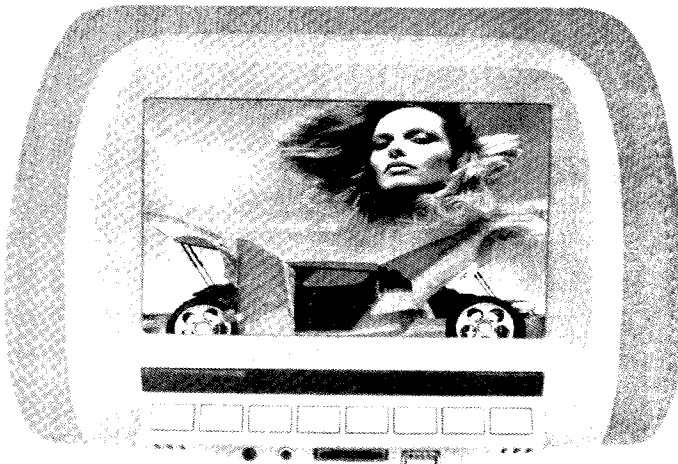

Thank you for purchasing the TFT LCD color monitor. To enjoy the features of this device and to ensure years of trouble-free operation, please read this manual carefully and follow the instructions.

 
WARNING:

Hazard do not operate this unit unless vehicle is parked in safe and legal area.

Warning

- ▶ Read this manual before using this product.
- ▶ This product is composed of precision components and should not be disassembled. Service must be performed by a factory authorized technician.
- ▶ Protect the product from moisture and shock.

Product installed

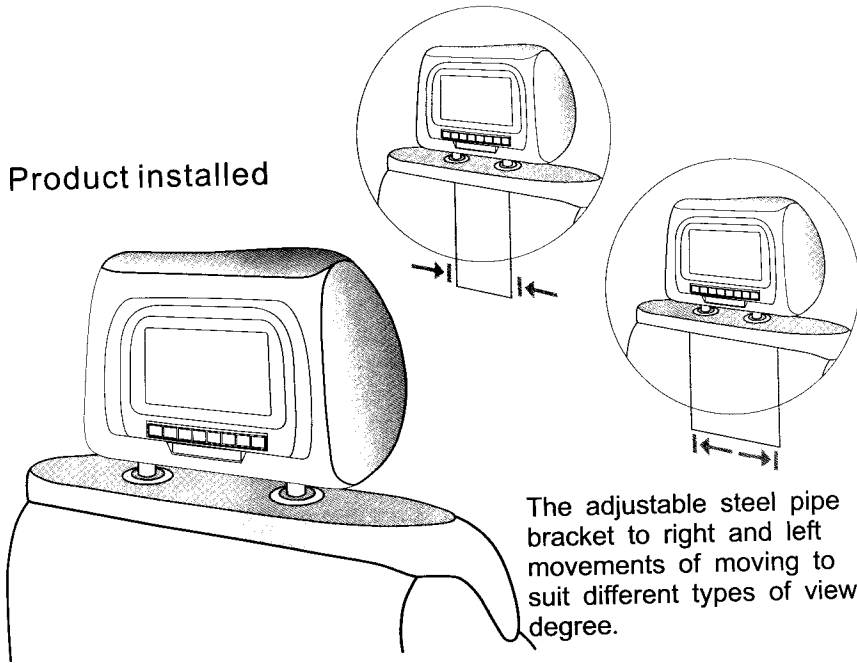

The adjustable steel pipe bracket to right and left movements of moving to suit different types of view degree.

How to use the Headrest monitor

Thank you for choosing this monitor for your mobile entertainment system. To ensure long-term trouble-free service of the product, please read this Manual carefully before using the monitor.

 
UNIVERSAL HEADREST WITH PRE-INSTALLED MONITOR OWNER'S MANUAL

Congratulations on your purchase of this headrest monitor system. The product is designed and built to deliver excellent video quality and long lasting high performance. For best results please consult a professional mobile electronics installer for application advice or troubleshooting. Please read these instructions thoroughly before installation.


Installation Instructions

1. Remove the existing headrest from the seat.
2. Adjust the posts of the new headrest to fit the holes in the seat where the headrest will be installed. The post can be moved together or apart: grasp one post in each hand, move the posts in right and left movements while pushing them toward each other or away from each other.
3. Insert the cable in the proper hole. Insert the posts into the holes in the seat and carefully work the headrest into position. Make sure the cable is not pinched.
4. Run the cable down the seat and out to the location of the video source unit (such as a DVD player).
5. Connect the wires as indicated:
 - a. Red: Connect to a switched (+) 12 volt source (ACC). Use a lead that has (+) 12V when the ignition is on or in the ACC position so the monitors "hot" could cause your battery to run down when the engine is not running.
 - b. Black: Connect to a good chassis ground.
 - c. Reversing the polarity of the red and black leads will damage the monitor.
 - d. Connect the video input connector to the video output from the source unit (i.e.DVD player).
 - e. Test the system.

Install the Cushion

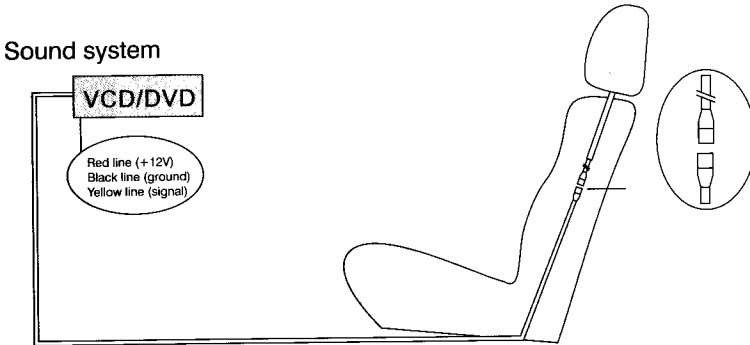

How to use the Adapter tubes

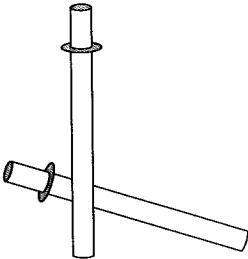 


Since the spacing of the mounting holes can vary on different vehicles we supply two adapter tubes (12mm diameter). Use these tubes when the headrest mounting holes in your seat are too large for the posts of the headrest monitor.

Monitor Controls and Features


The monitor is designed to operate in ambient temperature from -20°C to +50°C. Do not bump or press on the screen as this may damage the unit, keep the unit away from moisture.

 The specifications of this product are subject to our modification without notice.

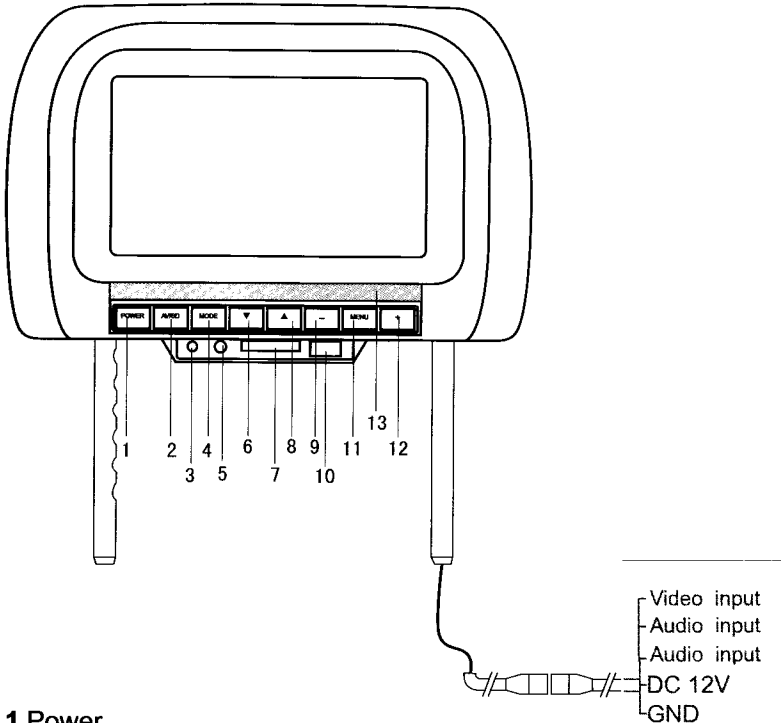

- 1** Power
- 2** AV/SD Switch
- 3** AV input
- 4** Mode
- 5** Earphone: Earphone sound output port
- 6** UP
- 7** SD
- 8** Down
- 9** Volume[-]
- 10** USB
- 11** Menu
- 12** Volume[+]
- 13** IR

 Remote Control

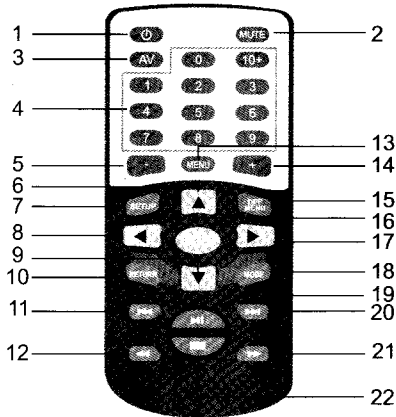

1. Power On/Off
2. Mute
3. AV
4. Figure Keys
5. Volume -
6. Up
7. Setup
8. Left
9. Down
10. Return
11. Last
12. Rewind
13. Menu
14. Volume +
15. Dpf Menu
16. Enter Button
17. R ight
18. Mode
19. Pause
20. Next
21. Forward
22. Stop

Features

- 7.0" wide(16:9) TFT LCD monitor
- Poles adjustable from 12.5cm to 20cm
- 2 ways AV input
- Color system:PAL/NTSC
- Resolution:480XRGBX234
- Brightness rating:300cd/m²
- Operating Temperature:-20° C to 50° C
- Storage temperature: -10° C to 70° C
- Environmental humidity:<90%
- Built-in USB SD IR Function

Troubleshooting

If you experience operation or performance problems with this product, compare you installation with the electrical wiring diagram on the previous page. If problems persist, read the following troubleshooting tips which may help eliminate the problems.

SYMPTOM	CAUSE	REMEDY
No picture or sound.	Power cord is not properly connected. Video input cables not properly connected. Video input source is not operating properly.	<i>Check that power connections are properly made and all fuses are in functioning condition.</i> <i>Check all cables.</i> <i>Replace or repair video source (DVD player, video game, etc.)</i>
No picture.	Video signal not present. Contrast and/or brightness is set improperly.	<i>Check all cables. If necessary, repair or replace video source.</i> <i>Adjust contrast and brightness levels to see if picture appears.</i>

Accessories

7.0" TFT LCD Pillow Monitor	1
Wireless Remote Control	1
Assembling Stick	2
Power Wire	1
User's Manual	1